

# COMMODORE MPS-803 DOT MATRIX PRINTER

A Friendly Introduction to Your MPS-803 Dot Matrix Printer



USER'S GUIDE

 **commodore**  
COMPUTERS

## USER'S GUIDE STATEMENT

"This equipment generates and uses radio frequency energy. If it is not properly installed and used in strict accordance with the manufacturer's instructions, this equipment may interfere with radio and television reception. This machine has been tested and found to comply with the limits for a Class B computing device peripheral in accordance with the specifications in Subpart 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. If you suspect interference, you can test this equipment by turning it off and on. If you determine that there is interference with radio or television reception, try one or more of the following measures to correct it:

- reorient the receiving antenna
- move the computer away from the receiver
- change the relative positions of the computer equipment and the receiver
- plug the computer into a different outlet so that the computer and the receiver are on different branch circuits.

If necessary, consult your Commodore dealer or an experienced radio/television technician for additional suggestions. You may also wish to consult the following booklet, which was prepared by the Federal Communications Commission:

"How to identify and Resolve Radio-TV Interference Problems" This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402, Stock No. 004-000-00345-4."

**IMPORTANT:** Shield interface cable must be used according to FCC 15.838D

## FOR USERS IN UK

**WARNING:** THIS APPARATUS MUST BE EARTHED

**IMPORTANT** The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	:	Earth
Blue	:	Neutral
Brown	:	Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured marking identifying the terminals in your plug proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol  $\perp$  or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

# **COMMODORE MPS-803 DOT MATRIX PRINTER USER'S GUIDE**

A Friendly Introduction to Your MPS-803 Dot Matrix Printer

 **commodore**  
COMPUTERS

The information in this manual has been reviewed and is believed to be entirely reliable. No responsibility, however, is assumed for inaccuracies. The material in this manual is for information purposes only, and is subject to change without notice.

This manual contains copyrighted and proprietary information. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Commodore Electronics Limited.

Copyright © 1984 by Commodore Electronics Limited.  
All rights reserved.

## Table Of Contents

	Page No.
<b>INTRODUCTION</b> .....	1
<b>Congratulations</b> .....	1
<b>Printer Features</b> .....	1
<b>Customer Support</b> .....	2
<b>CHAPTER 1: PREPARING TO USE YOUR PRINTER</b> .....	3
<b>A. Unpacking Your Printer</b> .....	3
<b>B. MPS-803 Printer Physical Characteristics</b> .....	3
<b>C. Installing and Removing The Ribbon Cartridge</b> .....	5
<b>D. Paper Instructions</b> .....	8
<b>E. Connecting The Printer To Your Computer</b> .....	10
<b>F. Performing The Power-On Test</b> .....	12
<b>G. Diagnostic Print Test</b> .....	12
<b>H. Trouble Shooting</b> .....	14
<b>I. Cautions</b> .....	15
<b>CHAPTER 2: USING YOUR PRINTER</b> .....	16
<b>A. Introduction</b> .....	16
<b>B. BASIC Commands Associated With Your Printer</b> .....	16
1. The OPEN Command .....	16
2. The PRINT# Command .....	17
3. The CLOSE Command .....	17
4. The CMD Command .....	17
5. Command Example .....	18
<b>C. Printing In The Direct Mode</b> .....	19
Program Listing .....	20
<b>D. Printing Under Program Control</b> .....	21
<b>E. Secondary Address</b> .....	21
1. SA=0: Printing in Graphic Mode .....	22
2. SA=7: Printing in Business Mode .....	24
<b>F. Special Control Character Functions</b> .....	26
1. Enhance ON/OFF CHR\$(14)/CHR\$(15) .....	27
2. Bit Image Printing Mode CHR\$(8) .....	28
3. Reverse ON/OFF CHR\$(18)/CHR\$(146) .....	32
4. Selecting Character Mode In Local CHR\$(17)/CHR\$(145) .....	34
5. Print Position Determination	
CHR\$(16): "nHnL" .....	36
6. Repeat Graphic Printing .....	37
7. Dot Address Determination	
CHR\$(27); CHR\$(16); CHR\$(nH); CHR\$(nL) .....	38
8. Line Feed/Carriage Return CHR\$(10)/CHR\$(13) .....	41
Automatic Printing .....	41

9.	Mixture of Various Print Mode	43
10.	Line Feed Spacing	44
11.	Quotation Marks " or CHR\$(34)	45
12.	Data Buffer Size	48
<b>APPENDICES</b>		<b>49</b>
APPENDIX A: MPS-803 Printer Specifications		49
1.	General Specifications	49
2.	Operating Environments	50
APPENDIX B: CBM ASCII Code Table & Font Table		51
1.	Graphic Mode	51
2.	Business Mode	52
APPENDIX C: Serial Interface Information		53
1.	The Connector:	53
2.	The Interface:	53
APPENDIX D: Hardcopy Of The Text Screen		54

# INTRODUCTION

## Congratulations

Congratulations on your recent purchase of the COMMODORE MPS-803 Dot Matrix Printer. You have added a grete deal of versatility and convenience to the use of your COMMODORE Computer system. This User's Guide is intended to introduce you to your new Printer. It includes all the information necessary to help you . . .

- Learn the names and functions of all external parts
- Install your Printer
- Connect the Printer to your computer
- Operate and maintain your Printer
- Write Programs for your Printer

In the process of showing you how to use your new Printer, this User's Guide assumes that you are familiar with the COMMODORE BASIC computer language. To get the most out of this Guide, it is suggested that you continue to refer to your computer's **USER'S GUIDE** and **PROGRAMMER'S REFERENCE GUIDE**.

## Printer Features

Your new Printer is a dot matrix printer. This MPS-803 printer is designed to operate through software control. It prints upper- and lower-case alphabetic characters, numeric characters, and all the graphic characters available on your COMMODORE computer, and even a custom user-defiened character.

Your Printer has the following features:

- Standard COMMODORE serial interface to allow easy connection to other COMMODORE computer peripheral devices
- 80 column printing
- Prints 60 characters per second
- Friction feed (Sprocket feed option)

Your Printer is designed to connect directly into your computer through the Serial Port (6 pin connector). It can be used with up to 4 Model 1541 floppy disk drives. These units are connected to the computer by "chaining" the devices together - each successive unit is plugged into the last unit connected to the the computer.

## **Customer Support**

Please check with your local **COMMODORE** dealer, **COMMODORE** User's Clubs and **COMMODORE** Magazines for additional support for your new Printer. They can also keep you informed about possible application programs written for your Printer.



# CHAPTER 1

## PREPARING TO USE YOUR PRINTER

### A. Unpacking Your Printer

Before you unpack your printer, inspect the shipping carton for signs of damage. Be especially careful when you inspect its contents. **DON'T** throw away any of the packaging material until you have located all the contents of the carton! The package should contain (Refer Figure 1).

1. Commodore Printer, Model MPS-803
2. Printer Ribbon Cassette
3. Serial Cable
4. User's Guide
5. Warranty Card

If any of these is missing or damaged, notify your Commodore dealer immediately.

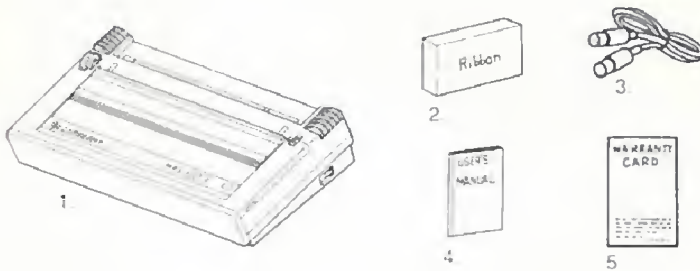


Figure 1.

### B. MPS-803 Printer Physical Characteristics:

#### Front and Top View

Please note the following locations for MPS-803 features:

- \* ON-OFF switch is on the right side of the printer housing.
- \* A power/error indicator and Paper Advance switch are located on the front right side of the printer housing.

## PARTS

- a. Power Switch:
- b. Power/Error Indicator:
- c. Top Cover:
- d. Paper Advance Knob:
- e. Paper Advance Switch:
- f. Paper Release Lever:

## OPERATION & FUNCTION

- Turns printer ON and OFF
- Lights up when printer is turned on. If a paper empty occurs, this indicator flashes. Paper empty can be recovered by re-installing paper and press Paper Advance Switch.
- Use your cover to protect your printer from dust and to reduce the noise level while the printer is in operation. And this top cover has paper cutter.
- Once you have properly threaded your paper, you can use the Paper Advance Knob to move the paper in forward direction only.
- Use this switch to move the paper ahead, 1 line at a time in the forward direction only! And self-diagnostic printing starts when power is turned on with this switch depressed.
- Releases paper in order to install paper smoothly and adjust in right position.

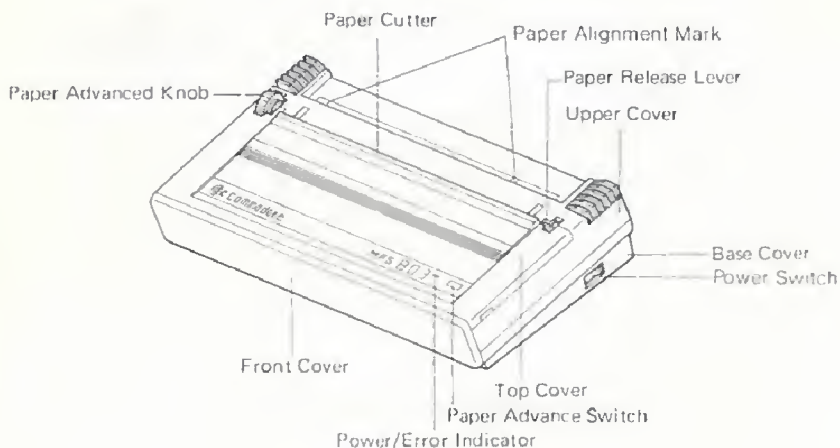


Figure 2.

### Back View:

Turn your Printer around so that you can look at the back of the unit as shown below. On the left side you will see the power line connection. On the center,

you will see two serial interface connectors to connect the unit to your computer.

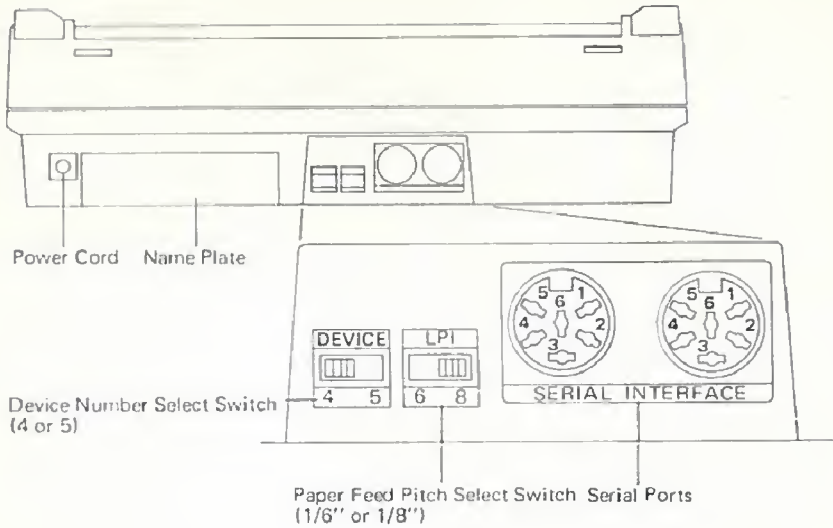


Figure 3.

- |                                    |  |
|------------------------------------|--|
| a. Power Cord:                     | Connect wallet outlet.   |
| b. Serial Ports:                   | These connectors are used to connect your Printer to the computer. Use the Serial Interface cable supplied with the printer. Refer to Chapter 1 part G for complete connection instructions. |
| c. Device Number Select Switch:    | Use this switch to select the device number (4 or 5).  |
| d. Paper Feed Pitch Select Switch: | Use this switch to select the line feed amount (1/6" or 1/8").   |
| e. Name Plate:                     | This plate describes Model Name, required power source voltage, and aquired standards.   |

## C. Installing and Removing The Ribbon Cassette

### 1. Installing the Ribbon Cassette

- a. Locate the packet that contains the ribbon cassette. You should have received this packet in the same box that your printer come in.

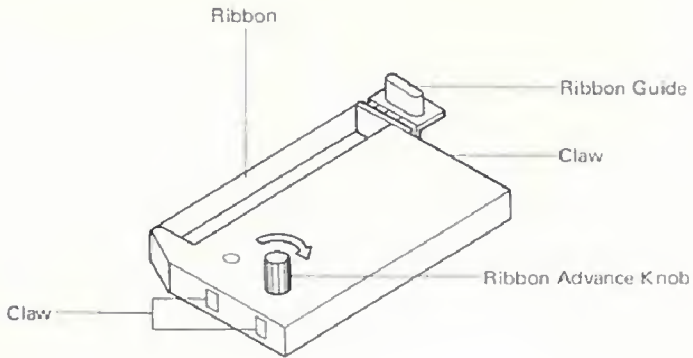


Figure 4.

- b. Remove the ribbon cassette from the packet and place it carefully in front of you.
- c. Look at the cassette. You will notice that one side has a ribbon advance knob.
- d. Rotate ribbon advance knob in the direction of the arrow until all the slack is taken out of the ribbon.
- e. Turn off the power and remove the top cover. To remove it, lift up by holding both sides and pull to the direction of the arrow. (See Figure 5)

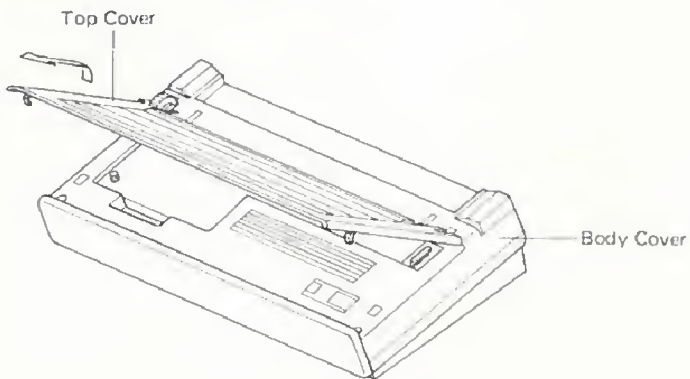


Figure 5.

- f. Move the print head toward the center of the setting space of the ribbon cassette.

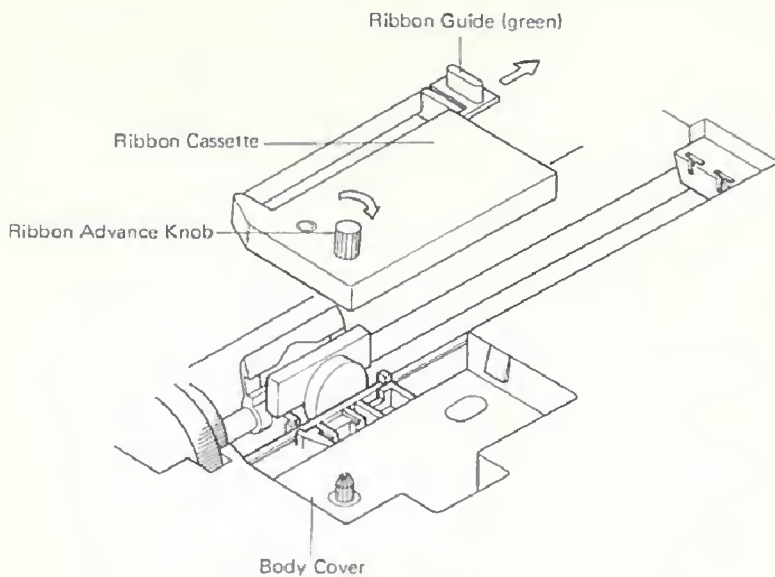


Figure 6.

- g. Place the ribbon between carriage and print head (See Figure 6), and set the ribbon cassette to the body cover (See Figure 7).

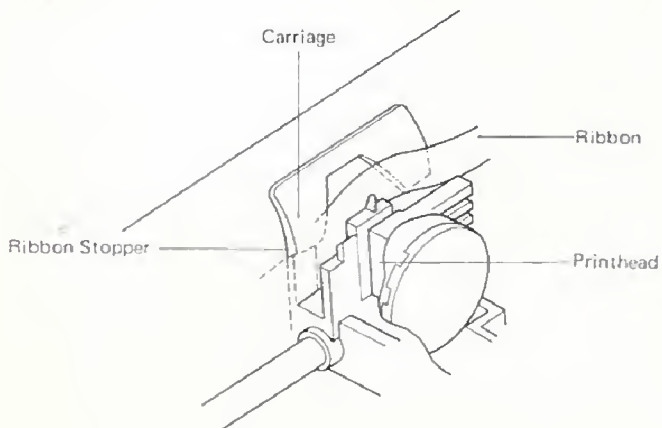


Figure 7.

- h. Turn the knob until the upper ribbon edge comes into ribbon stopper.
- i. Pull the ribbon guide toward right horizontally, and set it to the body cover.

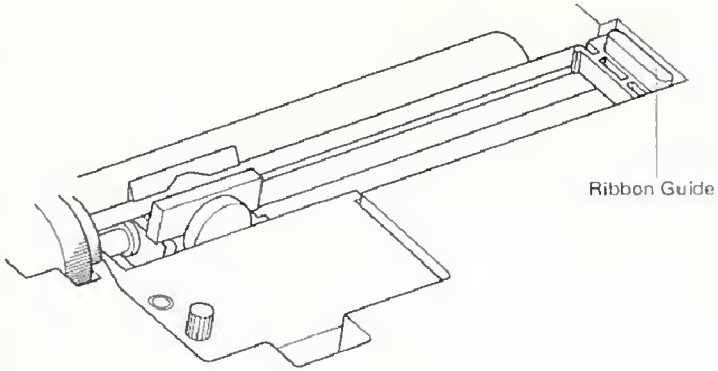


Figure 8.

- j. Turn the green knob to take up slack.  
**NOTE:** 1) Please make sure that ribbon is not twisted.  
2) Check again that the upper ribbon edge is in ribbon stopper.
- k. Put the top cover.

## 2. Removing the Ribbon Cassette

- a. Turn off the power and remove the top cover (See Figure 8).
- b. Pull up the ribbon cassette and ribbon guide.

## D. Paper Instructions

### 1. Paper Loading Instructions

- a. Push the paper release lever to the direction of OPEN (clockwise), and insert the paper into the slot shown with the arrow.

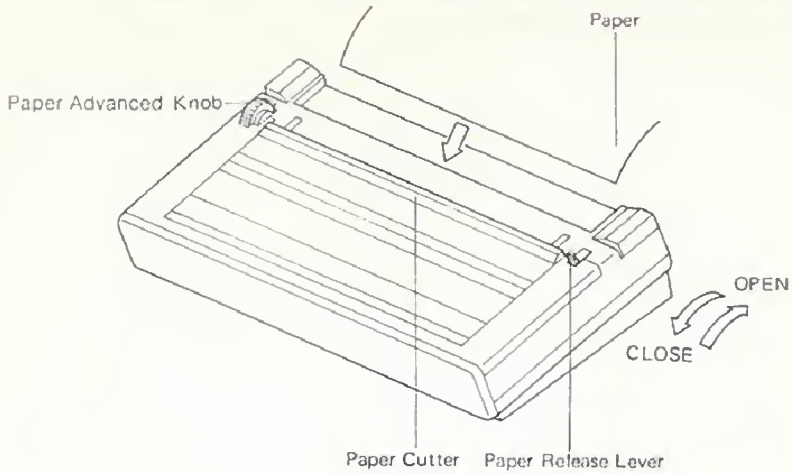


Figure 9.

- b. Pull the paper release lever to the direction of **CLOSE** (anti-clockwise). Turn the Paper Advance Knob to the direction of the arrow (clockwise) to advance paper until the edge of the paper comes out of the window cover.

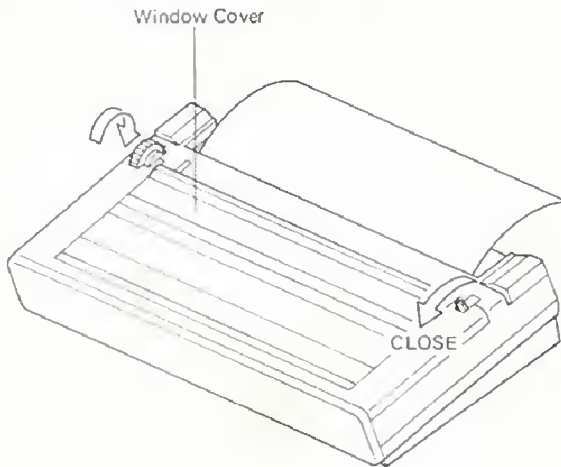


Figure 10.

- c. Push the paper release lever toward OPEN, and make the upper edge of the paper parallel to the window cover.

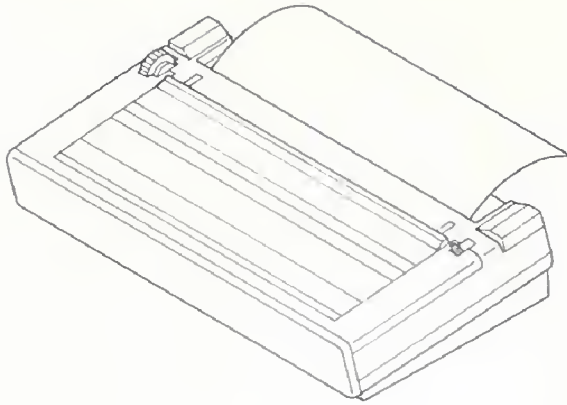


Figure 11.

- d. Pull the paper release lever toward CLOSE. Turn the Paper Advance knob to feed paper back and forward, and set the paper at the print starting position.

## 2. Paper Loading when Optional Tractor Feed Unit is Installed

- a. Push the paper release lever to the direction of OPEN (clockwise), and insert the paper into the paper slot.
- b. Turn the Paper Advance Knob to the direction of arrow to advance paper until the edge comes out of window cover.
- c. Move the paper release lever toward OPEN.
- d. Open the tractor covers of the tractor feed unit on both sides.
- e. Adjust the paper on to the feed pins of the tractor feed units on both sides. Then close the tractor covers. If the holes and the width of the paper are not aligned, shift the paper side ways until the spacing is correct. Then pull the paper from behind the printer to remove any slack.
- f. Adjust printing position by turning the paper advance knob.

## E. Connecting The Printer To Your Computer (See Figure 12, 13)

To connect your printer to your Commodore computer, please follow the instructions in the order listed below.



1. Make sure that both your computer and printer are turned OFF.
2. Connect one end of the 6-pin DIN cable to the connector holes located in the back of your printer at the lower left. This cable is "keyed" so that you cannot plug the cable in the wrong way. This means that the pins should be positioned so that a slight pressure will insert the cable properly. You should not have to force these pins in, and doing so could damage your cable.
3. Connect the other end of the cable to your computer in the Serial Port Connector located in the back of your computer (See Figure 12) or your Disk Drive (See Figure 13). Make sure that you are "keying" the pins properly into the connector with 6 holes.
4. Now plug the printer's power cord into a standard AC wall outlet. However, do NOT turn the equipment on yet.

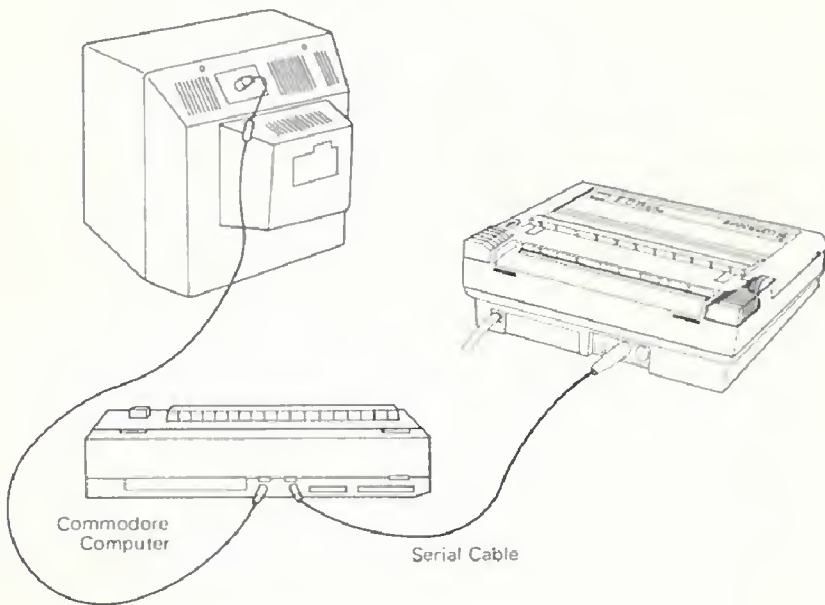


Figure 12. Printer to Computer Hookup

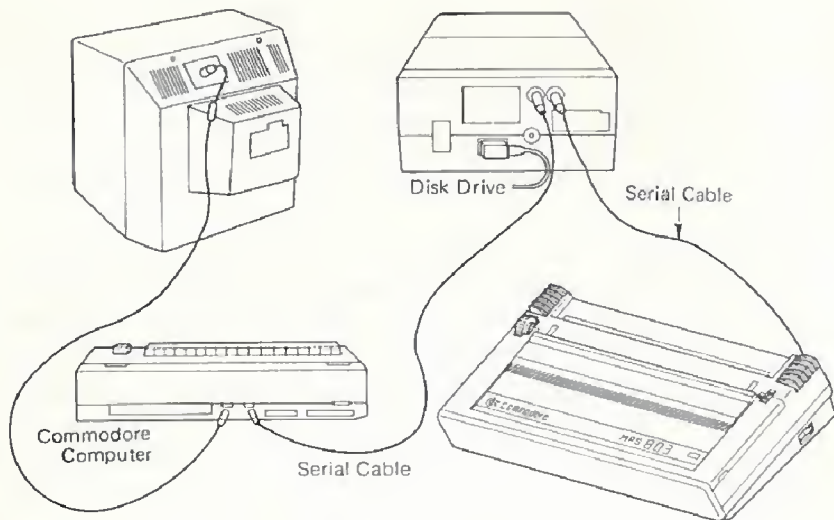


Figure 14. Multiple Hookup

## F. Performing The Power-On Test

You are now ready to proceed with the power-on part of the checkout:

1. Turn on the AC power to your computer and verify that it is working correctly.
2. To turn on the power to the printer, press the rocker switch at the side of the printer so that the white dot on the switch is visible. In response to the application of AC power, POWER light in the PAPER ADVANCE switch should be lit and the printer's microprocessor should move the print head to the far left from the center position, then to the center position. If this does not happen (and that's highly unlikely), turn off both machines, check all connections and try again. If you still don't get the correct response, contact your Commodore dealer.


## G. Diagnostic Print Test

Now you can perform the diagnostic print test the print head and the ribbon cassette as well after you have inserted the paper.

NEVER allow any printing to occur when there is no paper in the printer. If the paper empty occurs, the power/error indicator flashes on. Please paper install, and then press the paper advance switch, then paper empty status is recovered.

To perform the diagnostic print test, simply turn off the printer, then turn it back on while pressing the Paper Advance Switch.

**NOTE:** The Diagnostic Print Test is an 80 characters/line width, so user must use full size paper.

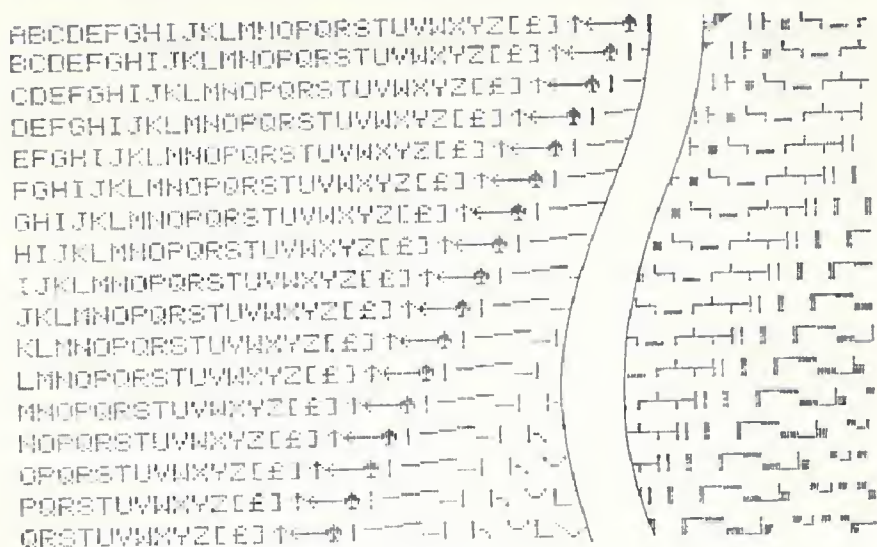

## H. Trouble Shooting

We hope you don't have any problems with your Printer. Just in case you do, however, see if you can solve the problem using the table below. If you still have problems, bring the Printer into your COMMODORE dealer for repair.

PROBLEM	PROBABLE CAUSES & SOLUTIONS
Printer won't print. Power indicator 'OFF'	cause: Printer solution: Check the power line connection and the power switch.
Printer won't print	cause: Improper connection to Computer. solution: Check all cable connections.
	cause: Improperly loaded cartridge. solution: Reload and adjust the cartridge.
Printer okay, paper won't advance.	cause: Paper is jammed. solution: Remove and reload the paper.
Printed characters are too light or smudging.	cause: Old or worn out ribbon cartridge. solution: Replace the cartridge.
	cause: Wrong cartridge setting. solution: Re-adjust the cartridge.

**IMPORTANT:** If you try to fix internal problems yourself by working inside your printer, you will void your warranty. Take the printer to your COMMODORE dealer for any necessary repairs.

## **I. Cautions**

- 1. Wait at least one minute to turn on the power after it is turned off so that the Printer will be initialized properly.**
- 2. Never place the Printer in direct sunlight.**
- 3. Never apply power while you are either plugging in or unplugging the serial interface connector.**
- 4. Never turn the power off while the Printer is operating.**
- 5. Never try to move the print head manually when the power is either on or not.**
- 6. Never stop the ribbon cartridge motion while it is printing.**
- 7. If a foreign object falls into the Printer, turn it off immediately and remove the object. (This situation is the only exception to item #4 above.)**

# CHAPTER 2

## USING YOUR PRINTER

### A. Introduction:

Now that you have learned how to install the ribbon cassette and paper into your new Printer, how to connect it to your computer, how to test it and how to solve any problems that may occur, you are ready for the next step — Putting the MPS-803 Printer to work with you.

In this chapter, you will see how to use your Printer to print program listing, program results, and graphic displays. Before we go any further, make sure that you are able to do the following:

1. Operate your COMMODORE computer.
2. Write elementary programs in BASIC language.
3. OPEN and CLOSE files.
4. Read and write files to various peripheral devices: (Like a DATASSETTE™ recorder or COMMODORE Floppy Disk Drive for the purpose of saving/retrieving programs keyed in as you continue through the rest of this manual.)

If you are not familiar with any of the above items, take the time now to read and understand **USER'S GUIDE** and **PROGRAMMER'S REFERENCE GUIDE**.

### B. Basic Commands Associated With Your Printer

#### 1. The OPEN Command:

This command creates a linkage or correspondence between a given physical device and a file number. Its format is as follows:

```
OPEN   lfn, dn, sa
```

where:

lfn

Is the logical file number (any number from 1 to 255). If the logical file number is greater than 127, any printed lines will be double spaced.

dn

Is the device number of the peripheral that will be sending/receiving the file. For the remainder of this manual, you will be using #4, the address of your Printer. (Since that is the number assigned to it at the factory.)

-----  
**NOTE:** If you want to change a printer device number, you can have it changed by DIP switch (you might want to have a printer's device number changed if you have two printers attached to your computer. You need to refer to each of the individually; hence, the need to change one of the device numbers.)  
-----

sa

Is the secondary address, a unique way of instructing your Printer's internal microprocessor to perform certain specific tasks. More about this important feature later.

## 2. The PRINT# Command:

This command works just like the BASIC PRINT command except that it directs the output to the Printer instead of the video screen. The abbreviation for PRINT# is pR (unshifted p and shifted R). There must be no space before the #, and spaces after the # are ignored. The format is as follows:

```
PRINT#    lfn    < , variable/data >
```

where:

lfn

Is the logical file lfnber (any number from 1 to 255). This number must correspond to a given OPEN command.

< variable/data > will be discussed in detail later in this user's guide.

## 3. The CLOSE Command:

Careful use of this command is important because you may only have a maximum of ten files open at any one time. Programming your Printer may require that you keep several files open simultaneously. Always close files when you are finished using them. The format is as follows:

```
CLOSE    lfn
```

where:

lfn

Is the logical file number of the file being closed, this number must correspond to a given OPEN command.

## 4. The CMD Command:

Good programming practice dictates never using this statement within a program; use this statement in direct mode only.

This statement transfers the primary output device (TV screen) to the logical file number specified in the command. The file must have been previously OPENed.

When this command is in effect, all output generated by PRINT or LIST command will be sent to the file instead of the video monitor. The format of the command is as follows:

CMD Ifn<, variable/data >

where:

Ifn

Is the logical file number to receive the output.

< variable/data > (optional) when specified is sent directly to the file. This can be used as a handy way of printing titles on printouts.

To re-redirect the output back to the primary output device, the PRINT# (not abbreviation) command must be used to send a blank line to the CMD device prior to closing the file. If a SYNTAX ERROR occurs, output will not be redirected back to the video monitor. Devices are not "unlistened" by this so you should PRINT# a blank line after an error condition.

## 5. Command Example

OPEN 1, 4, 7	File#1, device#4, secondary address#7
OPEN 2, 4	File#2, device#4 (secondary address is default #0)
PRINT#1, "HELLO THERE"	Print "HELLO THERE" on file#1
PRINT#2, ""	Print a blank line on file#2
CLOSE1: CLOSE2	Close file#1 and file#2

Remember, since CMD does not close the line to the printer, you must always precede a CLOSE command with PRINT# in order to properly close the file.

EXAMPLE:

Right	Wrong
OPEN 1, 4 PRINT#1, "HELLO THERE" CLOSE 1	
OPEN 2, 4, 7 CMD 2, "HELLO THERE" not PRINT#2 CLOSE 2	OPEN 2, 4, 7 CMD 2, "HELLO THERE" CLOSE 2
OPEN 3, 4 CMD 3, "HELLO THERE" not PRINT#3, "HELLO THERE" CLOSE 3	



```

OPEN 4, 4, 7
PRINT#4, "HELLO THERE" not
CMD 4, "HELLO THERE"
PRINT#4
CLOSE 4

```

```

OPEN 4, 4, 7
PRINT#4, "HELLO THERE"
CMD 4, "HELLO THERE"
CLOSE 4

```

Armed with these thumbnail descriptions of what the printer related commands do, you can now proceed to the next part of this chapter, which tells you how to use these commands to control your printer.

### C. Printing In The Direct Mode

Now that you have reviewed the BASIC commands you will need to handle files directed to your Printer, let's put them to use in some practical applications. The direct mode allows you to communicate with your printer by entering printing commands directly into your computer via the keyboard and having them executed immediately.

The following example illustrates the DIRECT mode procedure for listing a short BASIC program. In the example below, a single statement BASIC program is keyed into the computer's memory. A LIST command is keyed and the program is printed on your video monitor. A file (#3) is OPENed to your Printer. A CMD 3 is issued to the file open on your Printer (it is now listening). Issue the LIST command again. This time the output will be sent to your Printer. To unlisten the Printer, you instruct the computer to print a null character to file #3. Now you can CLOSE file #3, freeing up that file number for some other use. All output will now appear on the video monitor.

You Type:	The screen displays:	The Printer prints:
10 PRINT"TEST"	10 PRINT"TEST"	
LIST	LIST 10 PRINT"TEST"	
OPEN 3, 4	OPEN 3, 4 READY.	
CMD3	CMD3	READY.
LIST	LIST	10 PRINT"TEST" READY.
PRINT#3	PRINT#3 READY.	
CLOSE3	CLOSE3 READY.	

## Program List

Program LISTing is the most important job of the printer. To get a program list, follow the procedure below.

### 1. Program List in Graphic Mode

OPEN 4, 4: CMD4: LIST

Simple Listing

OPEN 4, 4: CMD4: LIST 100-500

Simple Listing Line No. 100-500

OPEN 4,4: CMD4, "PROGRAM NAME": LIST

Print the Program Name and Listing

OPEN 4, 4: CMD4, CHR\$(14); "PROGRAM NAME": LIST

Print the Program Name and Listing in enhance character

OPEN 4, 4: CMD4, CHR\$(14); "PROGRAM NAME"; CHR\$(15): LIST

Print the Program Name in enhance character and Listing in standard character

**NOTE:** Control Character CHR\$(14), CHR\$(15) are used in above procedure. You may find out more about these on Chapter 2 Part F. After getting the PROGRAM LIST, enter the following:

PRINT#4

CLOSE4

2. To get Program List in Business Mode, you should add the secondary address of 7 to the OPEN Statement.

OPEN 7, 4, 7: CMD7: LIST

Simple Listing

OPEN 7, 4, 7: CMD7: LIST 100-500

Simple Listing Line No. 100-500

OPEN 7, 4, 7: CMD7, "PROGRAM NAME" LIST

Print the Program Name and Listing

OPEN 7, 4, 7: CMD7, CHR\$(14); "PROGRAM NAME": LIST

Print the Program Name and Listing in enhance character

OPEN 7, 4, 7: CMD7, CHR\$(14); "PROGRAM NAME"; CHR\$(15): LIST

Print the Program Name in enhance character and Listing standard character

After getting the PROGRAM LIST, enter the following

PRINT#7

CLOSE7

## D. Printing Under Program Control

You have seen how to print a listing of a simple BASIC program directly from the keyboard. Although it is not good programming practice, the following example shows how to print a listing of a BASIC program under control of the program itself. First, enter the following simple program into your computer's memory:

```
10 OPEN 3, 4
20 CMD3
30 PRINT "PROGRAM CONTROL"
40 LIST
```

If you typed List on your keyboard, the program you just entered would be listed on your video monitor. Enter the RUN command. The following should be printed on your Printer:

```
PROGRAM CONTROL

10 OPEN 3, 4
20 CMD3
30 PRINT "PROGRAM CONTROL"
40 LIST
```

READY.

Now, enter the following

```
PRINT#3    (Unlisten the channel)
CLOSE3     (Close the channel)
```

The RUN command instructed the computer to execute the program in its memory. First, file#3 (device#4) was opened. Next, the CMD command instructed the computer to direct all subsequent output to file#3. The program then PRINTed PROGRAM CONTROL on file #3. The LIST command instructed the computer to print a listing of the program in its memory on file#3.

**REMEMBER** — when using the LIST command within a program, you must type the PRINT# Ifn command to unlisten the printer. Then you must type in the CLOSE Ifn command to close the file. Both of these commands can be entered into the program or after you have RUN the Program. Using the LIST command or the CMD command in a program is generally not a good programming practice. It is suggested that you only use them in DIRECT mode.

## E. Secondary Address

Earlier in this guide, you were introduced to the secondary address concept in the discussion of the OPEN statement. This unique feature allows you to instruct your new Printer to do following operations:

**OPERATIONS****Secondary Address**


---

Print in Graphic Mode	0 (default)
Print in Business Mode	7

---

**1. SA=0: Printing in Graphic Mode**

This secondary address causes the Printer to print ASCII data in Graphic (Upper-case/Graphic character) mode. As mentioned before, this secondary address is the default value and need not be coded.

The format for this command is as follows:

```
OPEN 4, 4      (OPEN 4, 4, 0)
PRINT#4 < , variable/data >
CLOSE 4
```

Try the following sample programs:

The first program will print three types of print in Graphic mode on your Printer.

**EXAMPLE 1:**

```
100 REM SA=0...PRINTING IN GRAPHIC MODE
110 OPEN4,4 :REM OPEN4,4,0
120 PRINT#4,"SECONDARY ADDRESS 0"
130 A$="PRINTING IN GRAPHIC MODE"
140 PRINT#4,A$
150 PRINT#4,123456789
160 FOR I=64 TO 95
170 PRINT#4,CHR$(I)
180 NEXT I
190 FOR J=1 TO 8:PRINT#4:NEXT J
200 CLOSE4
```

**RUN**

```
SECONDARY ADDRESS 0
PRINTING IN GRAPHIC MODE
123456789
@ABCDEFGHIJKLMNQRSTUvwxyz[ ]+~
```

The second sample program will print ASCII code table in Graphic Mode. The ASCII \$00-\$1F and \$80-\$9F are special control characters, so this code table won't print these codes.

**EXAMPLE 2:**

```

100 REM SA=0...PRINTING IN GRAPHIC MODE
110 OPEN 4,4 :REM OPEN 4,4,0
120 SP#=" "
130 A#="0123456789ABCDEF"
140 PRINT#4,SP#;SP#;
150 FOR I=0 TO 15
160 PRINT#4,MID$(A#,I+1,1);SP#;
170 NEXT I
180 PRINT#4
190 :
200 FOR J=0 TO 15
210 PRINT#4,MID$(A#,J+1,1);SP#;
220 PRINT#4,SP#;SP#;SP#;SP#;
230 PRINT#4,CHR$(J+32);SP#;CHR$(J+48);SP#;
240 PRINT#4,CHR$(J+64);SP#;CHR$(J+80);SP#;
250 PRINT#4,CHR$(J+96);SP#;CHR$(J+112);SP#;
260 PRINT#4,SP#;SP#;SP#;SP#;
270 PRINT#4,CHR$(J+128);SP#;CHR$(J+144);SP#;
280 PRINT#4,CHR$(J+160);SP#;CHR$(J+176);SP#;
290 PRINT#4,CHR$(J+192);SP#;CHR$(J+208);SP#;
300 PRINT#4,CHR$(J+224);SP#;CHR$(J+240)
300 NEXT J
310 FOR K=1 TO 8:PRINT#4:NEXT K
320 CLOSE4

```

**RUN**

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0			0	0	P	-	□					r	-	□		r
1		!	1	R	O	•	•				■	+	•	•	■	+
2		"	2	B	R	!	-				■	+	!	-	■	+
3		#	3	C	S	-	•				□	+	-	•	□	+
4		\$	4	D	T	-	!				□	!	-	!	□	!
5		%	5	E	U	-	!				□	!	-	!	□	!
6		&	6	F	V	-	•				■	!	-	•	■	!
7		^	7	G	N	!	□				□	-	!	□	!	-
8		<	8	H	X	!	•				■	-	!	•	■	-
9		>	9	T	M	!	!				■	•	!	!	■	•
A		•	.	J	7	!	•				□	!	!	•	□	!
B		+	:	K	C	!	+				□	!	!	+	□	!
C		,	<	L	F	!	•				□	!	!	•	□	!
D		-	=	M	3	!	!				□	!	!	!	□	!
E		.	>	N	T	!	!				□	!	!	!	□	!
F		^	^	O	6	!	•				□	!	!	!	□	!

## 2. SA=7: Printing in Business Mode

To change the printer to print on Business (Lower/Upper-Case Character) Mode, you must open the printer file on SA=7:

The format for this command is as follows:

```
OPEN 7, 4, 7
PRINT#7 <, variable/data >
CLOSE 7
```

Try the following sample programs:

The first program will print three types of print in Business mode on your Printer.

### EXAMPLE 1:

```
100 rem sa=7...Printing in business mode
110 open 7,4,7
120 print#7,"Secondary Address 7"
130 a#="Printing in Business Mode"
140 print#7,a#
150 print#7,123456789
160 for i=64 to 95
170 print#7,chr$(i)
180 next i
190 print#7
200 for j=1 to 8:print#7:next j
210 close7
```

RUN

```
Secondary Address 7
Printing in Business Mode
 123456789
@abcdefghijklmnopqrstuvwxyz[ ]!#
```

The second sample program will print ASCII code table in Business Mode. The ASCII \$00-\$1F and \$80-\$9F are special control characters, so this code table won't print these codes.

### EXAMPLE 2:

```
100 rem sa=7...Printing in business mode
110 open 7,4,7
120 sp#="" "
```

```

130 a$="0123456789abcdef"
140 Print#7,sp#(sp#)
150 for i=0 to 15
160 Print#7,mid$(a$,i+1,1);sp#;
170 next i
180 Print#7
190 :
200 for j=0 to 15
210 Print#7,mid$(a$,j+1,1);sp#;
220 Print#7,sp#;sp#;sp#;sp#;
230 Print#7,chr$(j+32);sp#;chr$(j+48);sp#;
240 Print#7,chr$(j+64);sp#;chr$(j+80);sp#;
250 Print#7,chr$(j+96);sp#;chr$(j+112);sp#;
260 Print#7,sp#;sp#;sp#;sp#;
270 Print#7,chr$(j+160);sp#;chr$(j+176);sp#;
280 Print#7,chr$(j+192);sp#;chr$(j+208);sp#;
290 Print#7,chr$(j+224);sp#;chr$(j+240)
300 next j
310 for k=1 to 7:Print#7;next k
320 close#7

```

### RUN

	0	1	2	3	4	5	6	7	8	9	a	b	c	d	e	f
0			0	@	P	-	P					r	-	P		r
1		!	1	a	q	A	Q			!	+	A	Q	!	+	
2		"	2	b	r	E	R			"	+	E	R	"	+	
3		#	3	c	s	O	S			#	+	O	S	#	+	
4		\$	4	d	t	O	T			\$	!	O	T	\$	!	
5		%	5	e	u	E	U			%	!	E	U	%	!	
6		&	6	f	v	F	V			&	!	F	V	&	!	
7		^	7	g	w	G	W			^	!	G	W	^	!	
8		()	8	h	x	H	X			()	!	H	X	()	!	
9		>	9	i	y	I	Y			>	!	I	Y	>	!	
&		*	*	j	z	J	Z			*	!	J	Z	*	!	
b		+	;	k	[	K	+			+	!	K	+	+	!	
c		,	<	l	]	L	]			,	!	L	]	,	!	
d		-	=	m	^	M	^			-	!	M	^	-	!	
e		.	>	n	_	N	_			.	!	N	_	.	!	
f		/	?	o	~	O	~			/	!	O	~	/	!	

## F. Special Control Character Functions

Special control characters can be used to change the mode of printing (Table 1 contains a summary of the special control characters). Printer control characters are inserted in the data stream transmitted to the printer via secondary address 0 or 7.

**TABLE 1**  
**Special Control Character Summary**

Printer function	CHRS Code
Enhance ON	CHRS(14)
Enhance OFF	CHRS(15)
Bit Image Printing	CHRS(8)
Reverse ON	CHRS(18)
Reverse OFF	CHRS(146)
Carriage Return	CHRS(13)
Line Feed	CHRS(10)
Print in Business Mode	CHRS(17)
Print in Graphic Mode	CHRS(145)
Quote	CHRS(34)
Tab Setting the Print Head	CHRS(16); "nHnL"
Repeat Graphic Selected	CHRS(26); CHRS (bit image data)
Specify Dot Address	CHRS(27); CHRS(16); CHRS(nH)CHRS(nL)



## 1. Enhance ON/OFF CHR\$(14)/CHR\$(15)

Your printer normally generates a character using dot matrix that is 7 dots high and 6 dots wide. If you send an ASCII CHR\$(14) character within a data output PRINT# statements parameter, all characters following the CHR\$(14) are printed double-width using dot matrix that is 7 dots high and 12 dots wide.

An ASCII CHR\$(15) character cancels the character enhancement specified by preceding CHR\$(14) character or ASCII CHR\$(15) is Standard Character Mode.

CHR\$(14) and CHR\$(15) cancel later mentioned bit image graphic printing code [CHR\$(8)]. And these control codes give a 1/6 inch line feed.

The example below shows Enhance ON/OFF functions.

### EXAMPLE 1:

```
100 REM CHR$(14)...ENHANCE ON/DOUBLE WIDTH CHR
110 REM CHR$(15)...ENHANCE OFF/STD WIDTH CHR
120 OPEN 4:4 :REM PRINT IN GRAPHIC MODE
130 EN#=CHR$(14):DE#=CHR$(15)
140 FOR I=1 TO 4
150 PRINT#4,EN#,"ENHANCE ON":
160 PRINT#4,DE#," ENHANCE OFF"
170 NEXT I
180 :
190 FOR J=1 TO 8:PRINT#4:NEXT J
200 CLOSE4
```

### RUN

```
ENHANCE ON ENHANCE OFF
ENHANCE ON ENHANCE OFF
ENHANCE ON ENHANCE OFF
ENHANCE ON ENHANCE OFF
```

### EXAMPLE 2:

```
100 REM CHR$(14)...ENHANCE ON/DOUBLE WIDTH CHR
110 REM CHR$(15)...ENHANCE OFF/STD WIDTH CHR
120 OPEN 4:4 :REM PRINT IN GRAPHIC MODE
130 EN#=CHR$(14):DE#=CHR$(15)
140 FOR I=1 TO 4
150 PRINT#4,EN#,"ENHANCE ON"
155 PRINT#4,EN#,"ENHANCE CONTINUE"
160 PRINT#4,DE#,"ENHANCE OFF"
```

```
170 NEXT I
180 :
190 FOR J=1 TO 8:PRINT#4:NEXT J
200 CLOSE4
```

RUN

```
ENHANCE ON
ENHANCE CONTINUE
ENHANCE OFF
ENHANCE ON
ENHANCE CONTINUE
ENHANCE OFF
ENHANCE ON
ENHANCE CONTINUE
ENHANCE OFF
ENHANCE ON
ENHANCE CONTINUE
ENHANCE OFF
```

## 2. Bit Image Printing Mode CHR\$(8)

By using CHR\$(8) you enter the Bit Image Printing Mode. This allows you to design and print bit image graphics by inputting bit image data. Each DATA statement is made of numbers that represent a row of dots which, when READ all together, will make up your bit image graphic. To design your bit image graphic, follow the example below. You should notice that each number in the DATA statement corresponds to 1 row in your bit image graphic. To design a graphic, follow these steps:

1. Get a separate piece of paper to design your bit image graphic.
2. Number 7 consecutive rows like this:

- 1
- 2
- 4
- 8
- 16
- 32
- 64

3. Now design your bit image graphic in dot form (see the example below).
4. Add together all the numbers from the column on the left, only wherever you have placed a dot in a row. In this example, the first column has 3 dots located in row 8, 16. Added together they equal 24.

5. Now add 128 to total you had for each column in step 4. In our example we add 128 to 24 for a total of 152.
6. Put your final total for each column into a data statement in column order.

1	○	○	○	○	○	○	●	●	○	○	○	○	○	○	○	○
2	○	○	●	●	●	●	●	●	●	●	○	○	○	○	○	○
4	○	○	●	●	○	○	●	●	○	○	●	●	○	○	○	○
8	●	●	●	●	○	○	●	●	○	○	●	●	●	●	○	○
16	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○
32	○	○	●	●	○	○	●	●	○	○	●	●	○	○	○	○
64	○	○	●	●	○	○	●	●	○	○	●	●	○	○	○	○
+128	152	152	254	254	146	146	255	255	146	146	254	254	152	152	128	128

The DATA statement in your program will read:

```
DATA 152, 152, 254, 254, 146, 146, 255, 255
DATA 146, 146, 254, 254, 152, 152, 128, 128
```

The following program will print a Flying object 5 times.

```
100 REM CHR$(8)...BIT IMAGE GRAPHIC PRINTING
110 OPEN 4,4 REM PRINT IN GRAPHIC MODE
120 BS#=CHR$(8):DE#=CHR$(15)
130 :
140 A#=""
150 FOR I=1 TO 16
160 READ A: A#=A#+CHR$(A)
170 NEXT I
180 :
190 FOR J=1 TO 5
200 PRINT#4,BS#:A#:DE#
210 NEXT J
220 :
230 FOR K=1 TO 8:PRINT#4:NEXT K
240 CLOSE#4
250 END
260 :
270 DATA 152,152,254,254,146,146,255,255
280 DATA 146,146,254,254,152,152,128,128
```

└──────────┬────────── This control code define 1/6" line feed  
(separate printed line)

After typing RUN, you get the result below:



This program shows all bit pattern printing.

**EXAMPLE 2:**

```
100 REM CHR$(8)...BIT IMAGE GRAPHIC PRINTING
110 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
120 BS#=CHR$(8):DE#=CHR$(15)
130 :
140 A#=""
150 FOR I=0 TO 127
160 A#=A#+CHR$(I+127)
170 NEXT I
180 B#=""
190 FOR J=127 TO 0 STEP-1
200 B#=B#+CHR$(J+127)
210 NEXT J
220 :
230 FOR K=1 TO 3
240 PRINT#4,BS#;A#;DE#:" ALL BIT PATTERN 1"
250 NEXT K
260 PRINT#4
270 FOR K=1 TO 3
280 PRINT#4,BS#;B#;DE#:" ALL BIT PATTERN 2"
290 NEXT K
300 :
310 FOR M=1 TO 8:PRINT#4:NEXT M
320 CLOSE4
```

After typing RUN, you get the result below.

```
ALL BIT PATTERN 1
ALL BIT PATTERN 1
ALL BIT PATTERN 1

ALL BIT PATTERN 2
ALL BIT PATTERN 2
ALL BIT PATTERN 2
```

Next Program prints out a bit image graphic .

```
100 REM CHR$(8)...BIT IMAGE GRAPHIC PRINTING
110 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
120 BS#=CHR$(8):DE#=CHR$(15)
130 :
140 FOR ROW=1 TO 3
150 FOR COLUMN=1 TO 16
160 READ A: A#(ROW)=A#(ROW)+CHR$(A)
170 NEXT COLUMN
180 NEXT ROW
190 :
200 PRINT#4,BS#;
210 FOR ROW=1 TO 3
220 PRINT#4,A#(ROW)
230 NEXT ROW
240 PRINT#4,DE#
250 :
260 FOR L=1 TO 8:PRINT#4:NEXT L
270 CLOSE4
280 END
290 :
300 DATA 129,129,250,250,158,158,255,255
310 DATA 158,158,250,250,129,129,128,128
320 DATA 128,128,159,159,243,243,179,179
330 DATA 243,243,159,159,128,128,128,128
340 DATA 128,128,130,130,131,131,128,128
350 DATA 131,131,130,130,128,128,128,128
```

RUN



(- continuous print lines)

Next example is to print signs of the zodiac by bit image graphic printing. Signs are not exactly clear because they consists of 7 (vertical) x 5 (horizontal) dots.

```
100 rem chr$(8)...bit image Graphic Printing
110 open 7,4,7 :rem Print in business mode
120 bs#=chr$(8):de#=chr$(15)
130 :
140 dim a$(12),b$(12)
150 for i=1 to 12
160 for j=1 to 6
```

```

170 read a: a$(i)=a$(i)+chr$(a)
180 next j
190 read b$:b$(i)=left$(b$+"",11)
200 next i
210 :
220 for k=1 to 6
230 Print#7,b$;a$(k);de$:" ";b$(k);
240 Print#7," ";
250 Print#7,b$;a$(k+6);de$:" ";b$(k+6);
255 Print#7
260 next k
270 :
280 for l=1 to 8:Print#7:next l
290 close#4
300 end
310 :
320 data 130,129,254,129,130,128,"Aries"
330 data 189,194,194,194,189,128,"Taurus"
340 data 227,221,193,193,221,227,"Gemini"
350 data 156,154,130,192,216,184,"Cancer"
360 data 136,148,142,129,190,192,"Leo"
370 data 255,129,254,193,254,152,"Virgo"
380 data 214,217,193,217,214,128,"Libra"
390 data 255,129,254,129,254,184,"Scorpio"
400 data 192,168,144,170,134,142,"Sagittarius"
410 data 143,240,143,194,188,140,"Capricornus"
420 data 164,200,164,200,164,128,"Aquarius"
430 data 201,190,136,136,190,201,"Pisces"

```

RUN

T Aries	♎ Libra
♉ Taurus	♏ Scorpio
♊ Gemini	♐ Sagittarius
♋ Cancer	♑ Capricornus
♌ Leo	♒ Aquarius
♍ Virgo	♓ Pisces

### 3. Reverse ON/OFF CHR\$(18)/CHR\$(146)

By sending the code [CHR\$(18)] to your printer, you have turned on the REVERSE FIELD mode. This prints white letters on a black background. By sending the code [CHR\$(146)] to your printer turns off the REVERSE FIELD mode.

### EXAMPLE 1:

```
100 REM CHR$(18) ...REVERSE ON
110 REM CHR$(146)...REVERSE OFF
120 RV#=CHR$(18):RO#=CHR$(146)
130 A#=" REVERSE ON ":B#=" REVERSE OFF "
140 :
150 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
160 FOR I=1 TO 5
170 PRINT#4,RV#;A#;RO#;B#;RV#;A#
180 NEXT I
190 :
200 FOR J=1 TO 8:PRINT#4:NEXT J
210 CLOSE4
```

### RUN

```
REVERSE OFF
REVERSE OFF
REVERSE OFF
REVERSE OFF
REVERSE OFF
```

### EXAMPLE 2:

```
100 rem "1" = chr$(18) ...reverse on
110 rem "2" = chr$(146)...reverse off
120 :
130 open 7,4,7:rem print in business mode
140 for i=1 to 5
150 print#7," Reverse on "
160 print#7," Reverse off "
170 next i
180 :
190 for i=1 to 3:print#7:next i
200 close7
```

run

Reverse of	Reverse of	Reverse of
Reverse of	Reverse of	Reverse of
Reverse of	Reverse of	Reverse of
Reverse of	Reverse of	Reverse of
Reverse of	Reverse of	Reverse of

#### 4. Selecting Character Mode In Local CHR\$(17)/CHR\$(145)

Secondary addresses 0 and 7 set a character mode in global (SA=0: Graphic Mode, SA=7: Business Mode), where as control codes CHR\$(17) [cursor down] and CHR\$(145) [cursor up] set a character mode in local ... CHR\$(17): Business Mode, CHR\$(145): Graphic Mode. Through these two control codes, the printer can produce two kinds of character set, both in graphic mode and in business mode, mixed on one line, that cannot show on screen.

CHR\$(17) functions until CHR\$(145) or carriage return is detected.  
 CHR\$(145) functions until CHR\$(17) or carriage return is detected.

#### EXAMPLE 1:

```

100 REM CHR$(17) ... LOCAL BUSINESS MODE
110 REM CHR$(145) ... LOCAL GRAPHIC MODE
120 CO#=CHR$(17):CU#=CHR$(145)
130 :
140 OPEN 7,4,7 :REM PRINT IN BUSINESS MODE
150 PRINT#7,CU#;"♠"           ";CO#;"SPACE"
160 PRINT#7,CU#;"♥"           ";CO#;"HEART"
170 PRINT#7,CU#;"♦"           ";CO#;"DIAMOND"
180 PRINT#7,CU#;"♣"           ";CO#;"CLUB"
190 PRINT#7:PRINT#7
200 CLOSE7
210 :
220 OPEN 4,4,4 :REM PRINT IN GRAPHIC MODE
230 PRINT#4,CO#;"SPACE"       ";CU#;"♠"
240 PRINT#4,CO#;"HEART"       ";CU#;"♥"
250 PRINT#4,CO#;"DIAMOND"     ";CU#;"♦"
260 PRINT#4,CO#;"CLUB"        ";CU#;"♣"
270 PRINT#4:PRINT#4
280 CLOSE4
290 :
300 OPEN 7,4,7
310 FOR I=1 TO 8:PRINT#7:NEXT I
320 CLOSE7

```



## RUN

```
♠      spade
♥      heart
♦      diamond
♣      club
```

```
spade  ♠
heart  ♥
diamond ♦
club   ♣
```

## EXAMPLE 2:

```
180 rem "3":chr$(17) ...local business mode
110 rem "0":chr$(145)...local graphic mode
120 :
130 open 7,4,7 :rem Print in business mode
140 Print#7,"LOGO M 01 08/8 Vertical"
150 Print#7,"SHIFT Y 07 07/8 Vertical"
160 Print#7,"SHIFT H 04 06/8 Vertical"
170 Print#7,"SHIFT I 01 05/8 Vertical"
180 Print#7,"SHIFT B 06 04/8 Vertical"
190 Print#7,"SHIFT G 06 03/8 Vertical"
200 Print#7,"SHIFT T 07 02/8 Vertical"
210 Print#7,"LOGO G 01 01/8 Vertical"
220 :
230 for i=1 to 8:print#7:next i
240 close7
```

run

```
LOGO M 1 8/8 Vertical
SHIFT Y 1 7/8 Vertical
SHIFT H 1 6/8 Vertical
SHIFT I 1 5/8 Vertical
SHIFT B 1 4/8 Vertical
SHIFT G 1 3/8 Vertical
SHIFT T 1 2/8 Vertical
LOGO G 1 1/8 Vertical
```

## 5. Print Position Determination CHR\$(16); "nHnL"

With the POS Code [CHR\$(16)] you can determine the print start position. This is done by assigning a 2-digit number following the CHR\$(16) (see the examples below).

### EXAMPLE 1:

```
100 REM CHR$(16)...SET PRINT POSITION
110 :
120 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
130 PO#=CHR$(16)
140 FOR I=1 TO 4
150 PRINT#4,"0123456789";
160 NEXT I
170 PRINT#4
180 PRINT#4,PO#;"08";"COMMODORE";
190 PRINT#4,PO#;"30";"PRINTER";
200 :
210 FOR J=1 TO 8:PRINT#4:NEXT J
220 CLOSE4
```

### RUN

```
0123456789012345678901234567890123456789
          COMMODORE          PRINTER
```

The two numbers following the CHR\$(16) codes are the print start position of your standard characters. This can be proven using the following example.

### EXAMPLE 2:

```
100 REM CHR$(16)...SET PRINT POSITION
110 :
120 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
130 PO#=CHR$(16):EN#=CHR$(14):DE#=CHR$(15)
140 FOR I=1 TO 4
150 PRINT#4,"0123456789";
160 NEXT I
170 PRINT#4
175 PRINT#4,EN#;
180 PRINT#4,PO#;"08";"COMMODORE";
190 PRINT#4,PO#;"30";"PRINTER";
195 PRINT#4,DE#;
200 :
```



7. Dot Address Determination  
 CHR\$(27); CHR\$(16); CHR\$(nH); CHR\$(nL)

ESC	POS	nH	nL
CHR\$(27)	CHR\$(16)	CHR\$(nH)	CHR\$(nL)

This code sequence specifies print start position in dot units. nH and nL are 2-byte binary numbers (0 through 639) which indicate dots where printing starts. When a number greater than 639 is specified, the dot is printed from the beginning of the next line.

D8	D7	D6	D5	D4	D3	D2	D1	
0	0	0	0	0	0	P10	P9	higher 2 bits
P8	P7	P6	P5	P4	P3	P2	P1	lower 8 bits

Desired number of print start positions can be specified. If a print start position is specified at a dot where other data is to be printed overstrike takes place.

EXAMPLE:

```

100 REM DOT POSITION SET
110 OPEN #4 : REM PRINT IN GRAPHIC MODE
120 PO#=CHR$(16):ESC#=CHR$(27)
130 :
140 FOR I=1 TO 4
150 PRINT#4,"1234567890"
160 NEXT I
170 PRINT#4
180 :
190 N=87
200 FOR J=1 TO 8
210 N=N+1
220 NH=INT(N/256):NL=N-NH*256
230 PRINT#4,ESC#;PO#;CHR$(NH);CHR$(NL)
235 PRINT#4,"DOT ADDRESS"
240 NEXT J
250 :
260 FOR K=1 TO 8:PRINT#4:NEXT K
270 CLOSE#4

```

RUN


```
1234567890123456789012345678901234567890
      DOT ADDRESS
      DOT ADDRESS
      DOT ADDRESS
      DOT ADDRESS
      DOT ADDRESS
      DOT ADDRESS
      DOT ADDRESS
      DOT ADDRESS
```

**EXAMPLE 2:**

```
100 REM DOT POSITION SET...SIN CURVE
110 OPEN#4 : REM PRINT IN GRAPHIC MODE
120 PO#=CHR#(16) : ESC#=CHR#(27)
130 EN#=CHR#(14) : DE#=CHR#(15)
140 :
150 CN=23 : AM=16 : OF=4
160 A#="-" : FOR I=0 TO CN+AM : A#=A#+ "-" : NEXT I
170 SP#=""
180 PRINT#4, EN# : " SIN CURVE" : DE#
190 PRINT#4
200 PRINT#4, LEFT$(SP#, OF-1) : "X" :
210 PRINT#4, LEFT$(SP#, CN-AM-OF-1) : "-1" :
220 PRINT#4, LEFT$(SP#, AM-1) : "0" :
230 PRINT#4, LEFT$(SP#, AM-1) : "1" :
240 PRINT#4, A#
250 :
260 FOR J=0 TO 360 STEP 10
270 I#=RIGHT$(SP#+STR$(J), OF)
280 Y0=CN#6+AM#S#SIN(J#*PI/180)
290 YH=INT(Y0/256) : YL=Y0-YH#256
300 PRINT#4, I# : REM SCALE
310 PRINT#4, ESC# : PO# : CHR$(YH) : CHR$(YL) : "*"
320 NEXT J
330 :
340 FOR K=1 TO 8 : PRINT#4 : NEXT K
350 CLOSE#4
```

RUN

# SIN CURVE

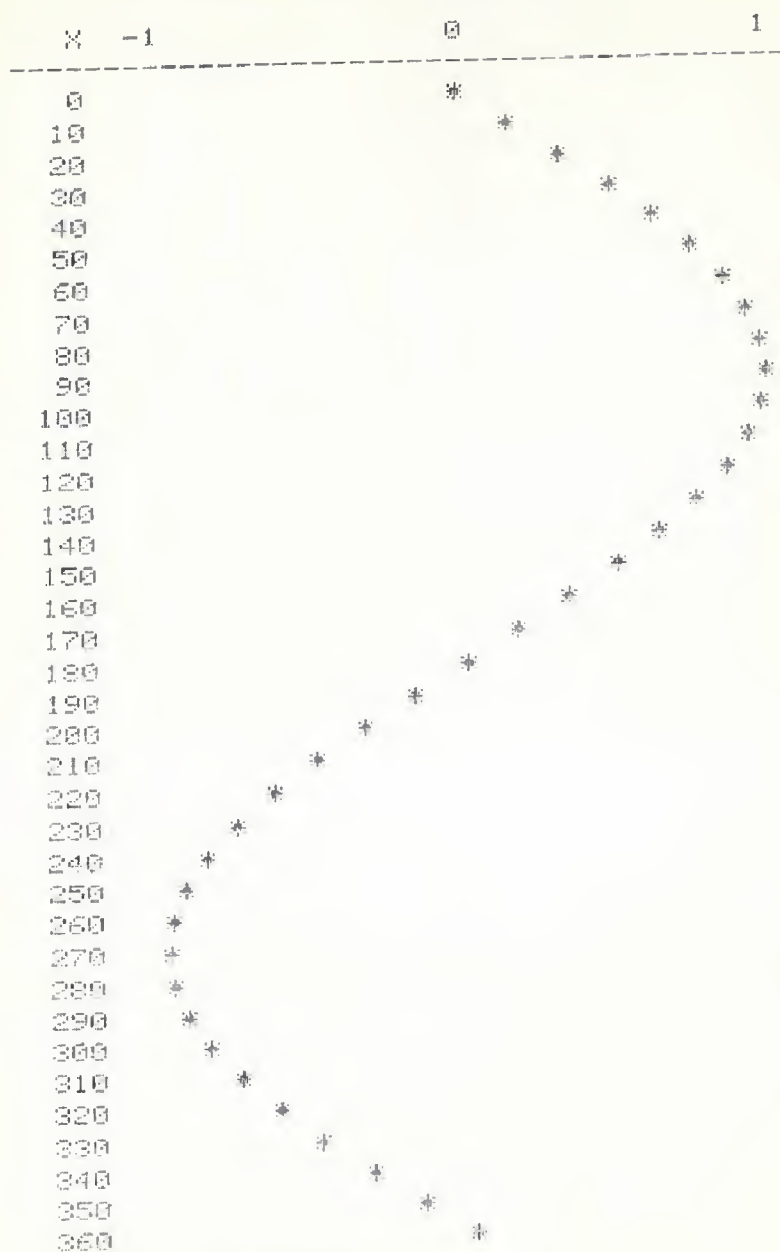

## 8. Line Feed/Carriage Return CHR\$(10)/CHR\$(13)

By sending LF Code [CHR\$(10)] to your printer, all data in the print buffer is printed and the paper is advanced one line.

By sending CR Code [CHR\$(13)] to your printer, all data in the print buffer is printed and the paper is advanced one line.

A Carriage Return turns off REVERSE FIELD and quote mode.

### EXAMPLE 1:

```
100 REM CHR$(10) ...LINE FEED
110 REM           WITH CARRIAGE RETURN
120 REM CHR$(13) ...CARRIAGE RETURN
130 REM           WITH LINE FEED
160 LF#=CHR$(10):CR#=CHR$(13)
170 :
180 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
200 :
210 FOR I=1 TO 3
230 PRINT#4,"CHR$(10) ...LINE FEED ";
240 PRINT#4,"(WITH CARRIAGE RETURN)";LF#;
250 NEXT I
260 PRINT#4
300 FOR J=1 TO 3
320 PRINT#4,"CHR$(13) ...CARRIAGE RETURN ";
330 PRINT#4,"(WITH LINE FEED)";CR#;
340 NEXT J
380 :
480 FOR K=1 TO 8:PRINT#4:NEXT K
490 CLOSE4
```

### RUN

```
CHR$(10) ...LINE FEED (WITH CARRIAGE RETURN)
CHR$(10) ...LINE FEED (WITH CARRIAGE RETURN)
CHR$(10) ...LINE FEED (WITH CARRIAGE RETURN)

CHR$(13) ...CARRIAGE RETURN (WITH LINE FEED)
CHR$(13) ...CARRIAGE RETURN (WITH LINE FEED)
CHR$(13) ...CARRIAGE RETURN (WITH LINE FEED)
```

### AUTOMATIC PRINTING

Automatic printing will occur under 3 conditions. In order to understand ex-

actly what's happening, you have to have a little knowledge about how your printer works. First, each printed character is made from 6 rows of dots. Next, you can have up to 80 characters per printed line (spaces count as 6 dots positions just like letters and numbers). This means that there are a total of 480 dots per line. Now you're ready for the 3 conditions.

- a. When the buffer fills up during the input of data.
- b. When your printer "sees" that you have used up more than the 480 dots per line that was described above.
- c. When both a and b happen at the same time.

What will happen when these conditions occur?

- a. When the buffer fills during printing, it prints out everything it has been storing onto your paper. But . . . it remembers where it stopped printing so that it can continue from that point, when and if you want to. Or, it will print again when you want to. Or it will print again when you fill the buffer again.
- b. When the printer uses up more than 480 dots, then it prints out the line and then stops and tells you that it's READY for more information.
- c. When both a and b occur, your printer will "dump" only the first 80 characters and print them. Then it will move to the next line. At this point, the printer will do two things: 1) It will hold any characters that have been left in the buffer and add to them; 2) It will give you a READY for more information statement.

#### EXAMPLE:

```
100 REM AUTO CARRIAGE RETURN
110 OPEN#4,4 :REM PRINT IN GRAPHIC MODE
120 A#="1234567890" :B#="" :C#="COMMOIGRE"
130 FOR I=1 TO 8
140 PRINT#4,"          ",INT#(A#*(I,10))
150 NEXT I
160 PRINT#4
170 FOR J=1 TO 8
180 PRINT#4,A#;
190 NEXT J
200 PRINT#4
210 :
220 FOR K=1 TO 12
230 B#=#B#+C#
240 PRINT#4,B#
250 NEXT K
```



```

260 :
270 FOR K=1 TO 8:PRINT#4:NEXT K
280 CLOSE4

```

RUN

```

          1          2          3          7          8
1234567890123456789012345678901234567890
COMMODORE
COMMODORECOMMODORE
COMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOM
COMMODORECOMMODORECOMMODORECOM
COMMODORECOMMODORECOMMODORECOM
COMMODORECOMMODORECOMMODORECOM
COMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE
COMMODORECOMMODORECOMMODORECOMMODORECOMMODORECOMMODORE

```

## 9. Mixture of Various Print Mode

You can use the following example to get an idea as to how to combine more than one print mode, even in one line.

### EXAMPLE:

```

100 REM MIXTURE OF VARIOUS PRINT MODE
110 DATA 156,162,193,193,182,162
120 FOR I=1 TO 6:READ A:A#=A#+CHR#(A):NEXT I
130 :
140 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
150 BS#=CHR#(8)+ESC#=CHR#(27):
160 PO#=CHR#(16)+SUB#=CHR#(36)
170 EN#=CHR#(14)+DE#=CHR#(15)
175 CO#="" COMMODORE ""
180 :
190 PRINT#4,BS#;SUB#;CHR#(38);CHR#(159);
200 PRINT#4,DE#,PO#;"03";CO#;
210 PRINT#4,BS#,ESC#,PO#;CHR#(8);CHR#(89);
A#;EN#;CO#;

```



## 11. Quotation Marks " or CHR\$(34)

In order to print quotation marks around particular characters, use the character code [CHR\$(34)]. When incorporating quotation marks in your program for print statement purposes, use them logically and effectively, do not place any together unless the program design specifically requires it.

The printed output of the example 1 below will be:

```
"COMMODORE"
```

```
"BUSINESSQUOTES"
```

```
" 0 "
```

Line 130 forms the print routine for "COMMODORE"

Line 150 will print "BUSINESSQUOTES" because both BUSINESS and CHR\$(34) are enclosed within their own quotes.

Line 170 will print " 0 " because the word MACHINES is taken as a numeric variable since it is not enclosed within quotes and it's contents are naturally zero.

### EXAMPLE 1:

```
100 REM QUOTE MARK OR CHR$(34)
110 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
120 QUOTE$=CHR$(34)
130 PRINT#4,QUOTE$:"COMMODORE",QUOTE$
140 GOSUB230
150 PRINT#4,QUOTE$:"BUSINESSQUOTE$",QUOTE$
160 GOSUB230
170 PRINT#4,QUOTE$:MACHINES,QUOTE$
180 GOSUB230
190 FOR I=1 TO 8:PRINT#4:NEXT I
200 CLOSE4
210 END
220 :
230 FOR J=1 TO 2:PRINT#4:NEXT J
240 RETURN
```

If an odd number of quotation marks have been transmitted, control characters are made visible. This can be particularly useful when you are making a listing a BASIC program containing control characters in quotation marks.

#### EXAMPLE 2: (Graphic Mode)

```
100 REM CONTROL CHARACTERS
110 PRINT"␣ HOME"
120 PRINT"␣ CLR"
130 PRINT"␣ CRSR DOWN"
140 PRINT"␣ CRSR UP"
150 PRINT"␣ CRSR RIGHT"
160 PRINT"␣ CRSR LEFT"
170 PRINT"␣ RVS ON"
180 PRINT"␣ RVS OFF"
190 PRINT"␣ F1"
200 PRINT"␣ F3"
210 PRINT"␣ F5"
220 PRINT"␣ F7"
230 PRINT"␣ F2"
240 PRINT"␣ F4"
250 PRINT"␣ F6"
260 PRINT"␣ F8"
270 PRINT"␣ BLACK"
280 PRINT"␣ WHITE"
290 PRINT"␣ RED"
300 PRINT"␣ CYAN"
310 PRINT"␣ PURPLE"
320 PRINT"␣ GREEN"
330 PRINT"␣ BLUE"
340 PRINT"␣ YELLOW"
350 REM COMMODORE 64
360 PRINT"␣ ORANGE"
370 PRINT"␣ BROWN"
380 PRINT"␣ LIGHT RED"
390 PRINT"␣ DARK GREY"
400 PRINT"␣ MED GREY"
410 PRINT"␣ LIGHT GREEN"
420 PRINT"␣ LIGHT BLUE"
430 PRINT"␣ LIGHT GREY"
440 OPEN4,4:CMD4.LIST
```

READY.

### EXAMPLE 3: (Business Mode)

```
100 new control characters
110 Print"␣ home"
120 Print"␣ clr"
130 Print"␣ crsr down"
140 Print"␣ crsr up"
150 Print"␣ crsr right"
160 Print"␣ crsr left"
170 Print"␣ nvs on"
180 Print"␣ nvs off"
190 Print"␣ f1"
200 Print"␣ f3"
210 Print"␣ f5"
220 Print"␣ f7"
230 Print"␣ f2"
240 Print"␣ f4"
250 Print"␣ f6"
260 Print"␣ f8"
270 Print"␣ black"
280 Print"␣ white"
290 Print"␣ red"
300 Print"␣ cyan"
310 Print"␣ purple"
320 Print"␣ green"
330 Print"␣ blue"
340 Print"␣ yellow"
350 new commodore 64
360 Print"␣ orange"
370 Print"␣ brown"
380 Print"␣ light red"
390 Print"␣ dark grey"
400 Print"␣ med grey"
410 Print"␣ light green"
420 Print"␣ light blue"
430 Print"␣ light grey"
440 open 7.4.7 cad7 list
```

ready.

## 12. Data Buffer Size

Your printer's print-line buffer can contain up to 90 bytes of data. At least 1 byte will be used for the CHARACTER code mode. But . . . since your printer provides you with automatic printing, you are guaranteed that no loss of data due to overflow will occur. This means that you really don't have to worry about buffer size. In addition to the print data, the following will also be included in your buffer:

Input Code	Bytes
CHRS(8) . . . . .	1
CHRS(10) . . . . .	1
CHRS(13) . . . . .	1
CHRS(14) . . . . .	1
CHRS(15) . . . . .	1
CHRS(16)/CHRS(HI)/CHRS(LO) . . . . .	4
CHRS(17) . . . . .	1
CHRS(18) . . . . .	1
CHRS(26)/"nHnL". . . . .	4
CHRS(27)/CHRS(16)/CHRS(nH)/CHRS(nL) . . . . .	4
CHRS(145) . . . . .	1
CHRS(146) . . . . .	1

# APPENDICES

## APPENDIX A: MPS-803 Printer Specifications

### 1. General Specifications

A. Print method	Impact Dot Matrix
B. Printing direction	Bi-directional
C. Character matrix	7 x 6 dot matrix
D. Characters	Upper/lower case characters, numerals, symbols, and PET graphic characters
E. Bit image type	7 Vertical Dots Bit Image Printing
F. Character codes	CBM ASCII CODE (8 Bit)
G. Character composition	Vertical: 7 dots (0.09", 2.4mm) Horizontal: 6 dots (0.08", 2.2mm)
H. Dot size	0.3mm (wire diameter) Horizontal pitch . . . . . 1/60" Vertical pitch . . . . . 1/72"
I. Print speed	60 characters per second
J. Column width	80 characters
K. Column spacing	10 characters/inch
L. Line spacing	6 lines/inch (USA) or 8 lines/inch (Europe). 72/7 lines/inch in bit image printing
M. Line feed speed	4 lines/sec . . . . in character printing 5.6 lines/sec . . . in bit image printing
N. Paper feed method	Friction feed Tractor feed optional
O. Paper width	Cut sheet A4                    210.8mm (8.3") Letter size        216mm (8.5") Continuous 101.6mm (4.0") to 254mm (10") With optional tractor feed
P. Number of copies	Original + 2 copies
Q. Inked ribbon	Cassette type fabric ribbon (black) 8mm x 10 meters
R. Ribbon life	1.2 x 10 characters

- S. Head life 20 million characters min.
- T. External dimensions 330(W) x 190(D) x 70(H)mm
- U. Weight Approximately 2.0 kg

## 2. Operating Environment

- A. Power source 117V (USA, Canada), 220–240V (Europe)  
AC+/-10%, 50/60Hz
- B. Power consumption 30 watts max. (character printing)  
8 watts (idling)
- C. Temperature 5°C – 35°C
- D. Humidity 20% – 80% (no condensation)



# APPENDIX B: CBM ASCII Code Table & Font Table

## 1. Graphic Mode

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0		POS	000	000	000	000	000	000			A	B	C	D	E	F
1		CRSR DOWN	000	000	000	000	000	000	CRSR UP		A	B	C	D	E	F
2		RVS ON	000	000	000	000	000	000	RVS OFF		A	B	C	D	E	F
3			000	000	000	000	000	000			A	B	C	D	E	F
4			000	000	000	000	000	000			A	B	C	D	E	F
5			000	000	000	000	000	000			A	B	C	D	E	F
6			000	000	000	000	000	000			A	B	C	D	E	F
7			000	000	000	000	000	000			A	B	C	D	E	F
8	BS		000	000	000	000	000	000			A	B	C	D	E	F
9			000	000	000	000	000	000			A	B	C	D	E	F
A	LF	SUB	000	000	000	000	000	000			A	B	C	D	E	F
B		ESC	000	000	000	000	000	000			A	B	C	D	E	F
C			000	000	000	000	000	000			A	B	C	D	E	F
D	CR		000	000	000	000	000	000			A	B	C	D	E	F
E	EN ON		000	000	000	000	000	000			A	B	C	D	E	F
F	EN OFF		000	000	000	000	000	000			A	B	C	D	E	F

**NOTE:** When an odd number of CHR\$(34) is detected in a line, the control codes S00–S1F and S80–S9F will be made visible by printing a reverse character for each of these controls. This will continue until an even number of quotes [CHR\$(34)] has been received or until end of this line.

## 2. Business Mode


	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0		POS	00	01	02	03	04	05			0A	0B	0C	0D	0E	0F
1		CRSR DOWN	10	11	12	13	14	15		CRSR UP	1A	1B	1C	1D	1E	1F
2		RVS ON	20	21	22	23	24	25		RVS OFF	2A	2B	2C	2D	2E	2F
3			30	31	32	33	34	35			3A	3B	3C	3D	3E	3F
4			40	41	42	43	44	45			4A	4B	4C	4D	4E	4F
5			50	51	52	53	54	55			5A	5B	5C	5D	5E	5F
6			60	61	62	63	64	65			6A	6B	6C	6D	6E	6F
7			70	71	72	73	74	75			7A	7B	7C	7D	7E	7F
8		BS	80	81	82	83	84	85			8A	8B	8C	8D	8E	8F
9			90	91	92	93	94	95			9A	9B	9C	9D	9E	9F
A		LF SUB	A0	A1	A2	A3	A4	A5			A8	A9	AA	AB	AC	AD
B		ESC	B0	B1	B2	B3	B4	B5			B8	B9	BA	BB	BC	BD
C			C0	C1	C2	C3	C4	C5			C8	C9	CA	CB	CC	CD
D		CR	D0	D1	D2	D3	D4	D5			D8	D9	DA	DB	DC	DD
E		EN ON	E0	E1	E2	E3	E4	E5			E8	E9	EA	EB	EC	ED
F		EN OFF	F0	F1	F2	F3	F4	F5			F8	F9	FA	FB	FC	FD

NOTE: When an odd number of CHR\$(34) is detected in a line, the control codes \$00-\$1F and \$80-\$9F will be made visible by printing a reverse character for each of these controls. This will continue until an even number of quotes [CHR\$(34)] has been received or until end of this line.

## APPENDIX C: Serial Interface Information

### 1. The Connector

Pin No.	Signal
1	SERIAL SRQ
2	GND
3	SERIAL ATN
4	SERIAL CLK
5	SERIAL DATA
6	RESET

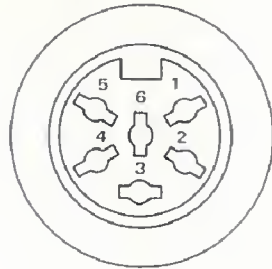

### 2. The Interface:

- Plug the serial interface cable supplied with your Printer into the Serial Bus connector for the connection. Refer to Chapter 1 Part E for details on how to connect your Printer to your computer.
- When the printer is printing, no data will be transferred from the computer (the data line is said to be **low**). When the printer is at rest, data can be transferred from the computer (the data line is said **high**).
- When printer error occurs, all control circuits inside the Printer will stop.

## APPENDIX D: Hardcopy of the Text Screen

The following sample program can be used to get a hard printed copy of a program you have on your text screen. The Program is made to be used as a sub-routine. That means that when you use it, you must have a "GOSUB 60000" in your program where appropriate.

```
60000 REM HARDCOPY OF TEXT SCREEN
60010 PO#=CHR$(16) :QT#=CHR$(34)
60020 RV#=CHR$(18) :RO#=CHR$(146)
60030 VR=PEEK(648)*256
60040 OPEN 4,4 :REM PRINT IN GRAPHIC MODE
60050 FOR CL=0 TO 22 :OF=0:AS#=""
60060 FOR RO=0 TO 31
60070 SC=PEEK(VR+22*CL+RO)
60080 IF SC=34 THEN OF=1-OF
60090 IF SC>162 THEN 60120
60100 OF=1-OF:IFOF=1THENAS#=AS#+RV#+QT#:GOTO60180
60110 AS#=AS#+QT#+RO#:GOTO60180:GOTO60140
60120 IFOF=1AND(SC)=128)THENS=SC-128:GOTO60140
60130 IFSO<128)THENS=SC-128:RF=1:AS#=AS#+RV#
60140 IFSO<32ORSO>95)THENS=SC+64:GOTO60170
60150 IFSO<31ANDSO<64)THENS=SC:GOTO60170
60160 IFSO<63ANDSO<96)THENS=SC+32:GOTO60170
60170 AS#=AS#+CHR$(AS)
60180 IFRF=1THENAS#=AS#+RO#:RF=0
60190 NEXT RO
60200 IFOF=0THENPRINT#4,PO#"20"AS#:GOTO60220
60210 PRINT#4,PO#"20"AS#QT#
60220 NEXT CL
60230 CLOSE4
60240 RETURN
```

This program is made for Graphic Mode. If you wish to write the program in Business Mode, you must change OPEN 4, 4 to OPEN 4, 4, 7 in line 60040.

This program is also made for VIC-20. If you wish to use this program to Commodore 64, you should change line 60050, 60060.

```
60050 FOR CL=0 TO 24 :OF=0:AS#=""
60060 FOR RO=0 TO 39
60070 SC=PEEK(VR+40*CL+RO)
```

**NOTE:** This program can't print the characters following the reverse quote,

## INDEX

ASCII code table 22, 24, 51, 52  
automatic printing 41  
bit image printing 28  
BS code→CHRS(8)  
business mode 22, 24, 34, 52  
carriage return 41  
cautions 15  
CHRS(8) 26, 28, 37, 48  
CHRS(10) 26, 41, 48  
CHRS(13) 26, 41, 48  
CHRS(14) 26, 27, 48  
CHRS(15) 26, 27, 48  
CHRS(16) 26, 36, 48  
CHRS(17) 26, 34, 48  
CHRS(18) 26, 32, 48  
CHRS(26) 26, 37, 48  
CHRS(27) 26, 38, 48  
CHRS(34) 26, 45  
CHRS(145) 26, 34, 48  
CHRS(146) 26, 32, 48  
CLOSE command 17  
CMD command 17  
CR code→CHRS(13)  
connecting 10  
control character 26  
cursor down→CHRS(17)  
cursor up→CHRS(145)  
data buffer 48  
device number 5, 16  
device number select switch 5  
direct mode 19  
dot address determination 38  
EN ON code→CHRS(14)  
EN OFF code→CHRS(15)  
ESC code→CHRS(27)  
font table 51, 52  
graphic mode 22, 34, 51  
hardcopy of text screen 54  
interface 53  
LF code→CHRS(10)  
line feed spacing 44  
loading the paper 8  
logical file number 16

lower/upper case mode→business mode  
OPEN command 16  
POS code→CHR\$(16)  
PRINT# command 17  
print position determination 36  
print power-on test 12  
program listing 20  
repeat bit image printing 37  
reverse field mode 32  
RVS ON code→CHR\$(18)  
RVS OFF code→CHR\$(146)  
ribbon cassette 6  
secondary address 17, 21  
    SA0 22  
    SA7 22, 24  
specifications 49  
SUB code→CHR\$(26)

## **COMMODORE SALES CENTERS**

### **Commodore Business Machines, Inc.**

1200 Wilson Drive  
West Chester, PA 19380, U.S.A.

### **Commodore Business Machines Limited**

3370 Pharmacy Avenue, Agincourt  
Ontario, M1W 2K4, Canada

### **Commodore Business Machines (UK) Ltd.**

1, Hunters Road, Weldon  
Corby, Northants, NN17 10X, England

### **Commodore Bueromaschinen GmbH**

PO BOX 710126, Lyonerstrasse 38  
6000 Frankfurt 71, West Germany

### **Commodore Italiana S.P.A.**

Via Fratelli Gracchi 48  
20092 Cinisello Balsamo, Milano, Italy

### **Commodore Business Machines Pty Ltd.**

5 Orion Road  
Lane Cove, NSW 2066, Australia

### **Commodore Computer B.V.**

Kabelweg 88  
1014 BC AMSTERDAM, Netherlands

### **Commodore AG(Schweiz)**

Aeschenvorstadt 57  
Ch-4010 Basel, Switzerland

### **Commodore Computer NV-SA**

Europalaan 74  
1940 ST-STEVENSWOLUWE, Belgium

### **Commodore Data AS**

Bjerrevej 67  
Horsens, Denmark

## **DISK DRIVES**

### **MODEL 1541**

Media compatible with 4040 and 2031LP diskettes.  
170 K of memory per single side disk.  
Serial port interface.

## **PRINTERS**

### **MODEL MCS-801**

Seven color, dot matrix printing.  
Up to 80 columns printed per page.  
Prints 30 characters per second.  
Perfect for everything from personal letters to important business reports.  
Serial port interface.

## **PRINTER/PLOTTER**

### **MODEL 1520**

Four color, printer/plotter for all graphic needs.  
Print bar graphs...create pie charts...plot time graphs.  
High quality printing in a variety of styles and sizes.  
Great for graphic artists.

## **MODEMS**

### **VICMODEM**

Timely financial information, news and reference libraries are as near as your phone.  
An affordable introduction to the growing world of phone/computer services.  
Communicate with a wide variety of computer users who already own a modem.

### **AUTOMODEM**

The convenience of automatic answering and dialing.  
The resource power of telecomputing services.  
Turn your phone into a telecomputing information network.

 **commodore**  
COMPUTERS